


INSTALLATION INSTRUCTIONS

CH02 TIE CLIP

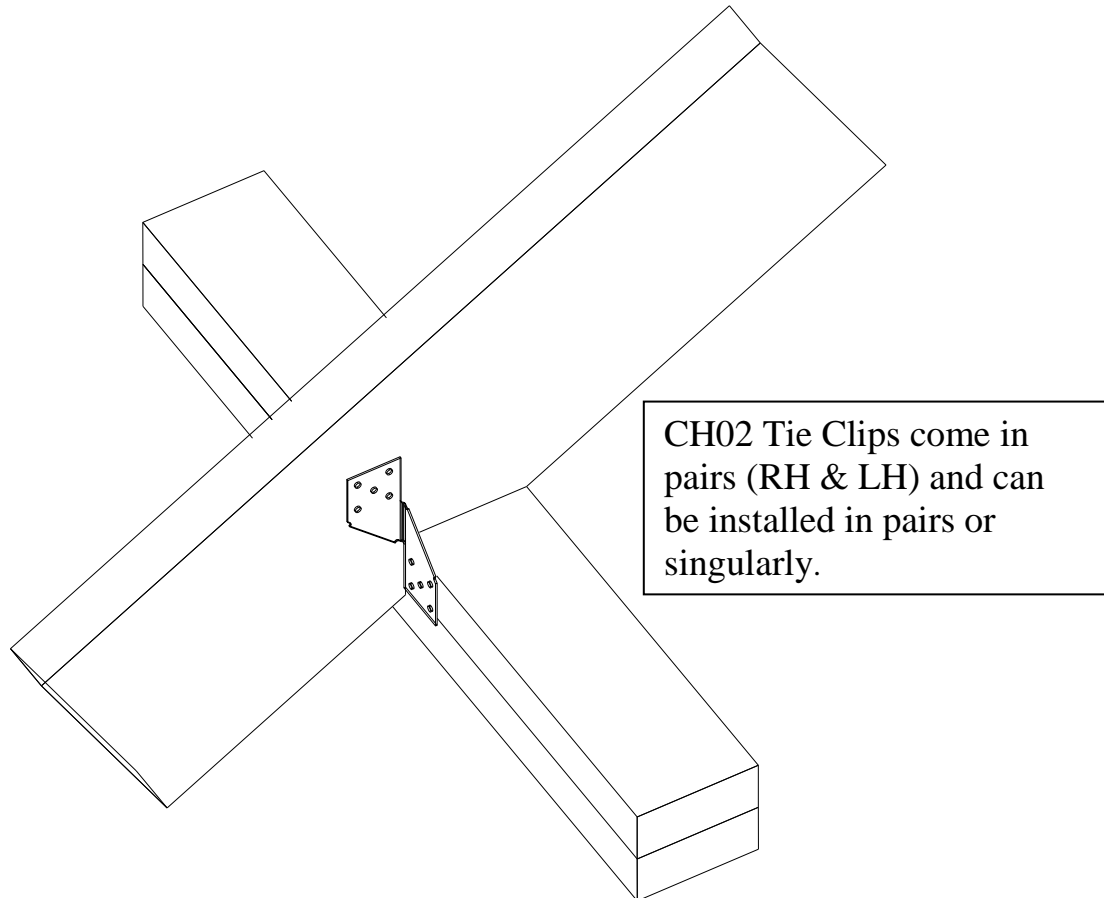

Align each leg of the CH02 Tie Clip flush with the face of the rafter and the top plate. Use a minimum of ten #8 wood screws or 8d nails, five in each leg, in Southern Yellow Pine. Pairs of CH02 Tie Clips and galvanized fasteners required in HVHZ of Florida.

CH Machine Corporation
P.O. Box 588
Vernon, Alabama 35592
205-695-0094
chmachineinc.com